

CastleGarde NetAudit Appliance

Installation – Quick Start Guide

Device Installation and Setup

Use this Quick Start Guide for the initial installation and setup of the CastleGarde NetAudit Appliance. CastleGarde provides our NetAudit device, a 1U (19"wide) rack mounted Appliance for use with our NetAudit Client software, installed separately.

- 1) Unpack the Appliance and verify the package contents. You should have:
 - a. The NetAudit Appliance (Purple)
 - b. 6' 3-prong power cord
 - c. 6' (or as requested) Cat6 Ethernet patch cable (Purple Cable)
 - d. 2-90° rack mounting brackets and 8 screws in a plastic zip-lock package
 - e. Rack slide rails (optional, depends on the order)

Ensure there is no physical damage to the shipping packaging or internal items. Retain the carton and packing material for return shipment.

- 2) Attach the 2 90 ° rack mounting brackets with screws (provided).
- 3) Install ("Rack") the Appliance into an appropriate 19" network rack or cabinet using the 90° brackets or optional slide rails.
- 4) **Connect the power cord** (provided) to a suitable Uninterruptible Power Supply (UPS) source.
 - a. Input voltage from 100-240 Volts, A/C.
 - b. <u>A 3-prong connection with an earth-ground Neutral is mandatory</u>. All network devices should be connected to a common earth-ground source through the power supply as is the case with NetAudit or a separate frame-ground strap (as specified by the vendor) or both.
- 5) **Connect the Ethernet patch cable (provided) to port <u>LAN 1</u> on the front of the Appliance to your internal LAN network.**
 - a. Use the provided Cat6 Ethernet patch cable (purple) or substitute Cat6-grade patch cable.
- 6) **Power up the NetAudit Appliance** by pressing the power switch rocker (black) located in the rear of the Appliance near the power cord.
 - a. **Verify network connectivity** by pinging the Appliance. From a Windows CMD prompt or Linux shell, type "ping x.x.x.x" where x.x.x.x is the pre-preconfigured Network Interface "card" (NIC). You should see replies with packet timing in milliseconds.
- 7) Configure your firewall to allow access from CastleGarde's IP address 108.9.163.2 to the Appliance from the public internet. CastleGarde uses a secure, encrypted VPN connection to update and maintain the Appliance.
- 8) **Notify CastleGarde** by email, <u>netaudit@castlegarde.com</u> or telephone (813) 872-4844 when completed so that we may verify connectivity.
- 9) Continue by installing the Windows Client from <u>netaudit.castlegarde.com</u>. Download and install client the software from the icon. Refer to the User's Guide (PDF link icon) for a Quick Start walkthrough about using the NetAudit client program.

Contact CastleGarde NetAudit technical support with any questions (813) 872-4844.